 
 



# CLIP mounting plate adjustments

## Height adjustment



### Cam wing mounting plate



 
Rotate cam screw on the mounting plate to adjust door position (+/- 2 mm).

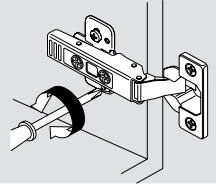



### One-piece wing plate

  

 
Loosen screws on the mounting plate. Adjust door to position and tighten screws (+/- 3 mm).

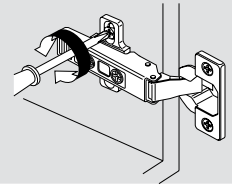



### Cam in-line mounting plate

  

 
Rotate cam screw on the mounting plate to adjust door position (+/- 2 mm).

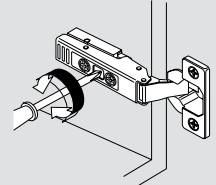



### Face frame cam adapter plate

  

 Rotate cam screw on the mounting plate to adjust door position (+/- 2 mm).

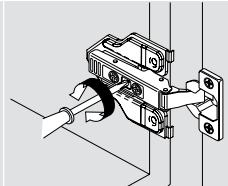

### Face frame adapter plate

  

Loosen screws on the mounting plate. Adjust door to position and tighten screws (+/- 2 mm).

